


C4 1964 Valve Body
 Use "SK 4" Shift Kit®
 No HD kit for 64 VB

C4 Casting Number
On Valve Body/




LISTEN UP: Install all the end plate bolts
loosely. LAST THING: Tighten plate bolts.

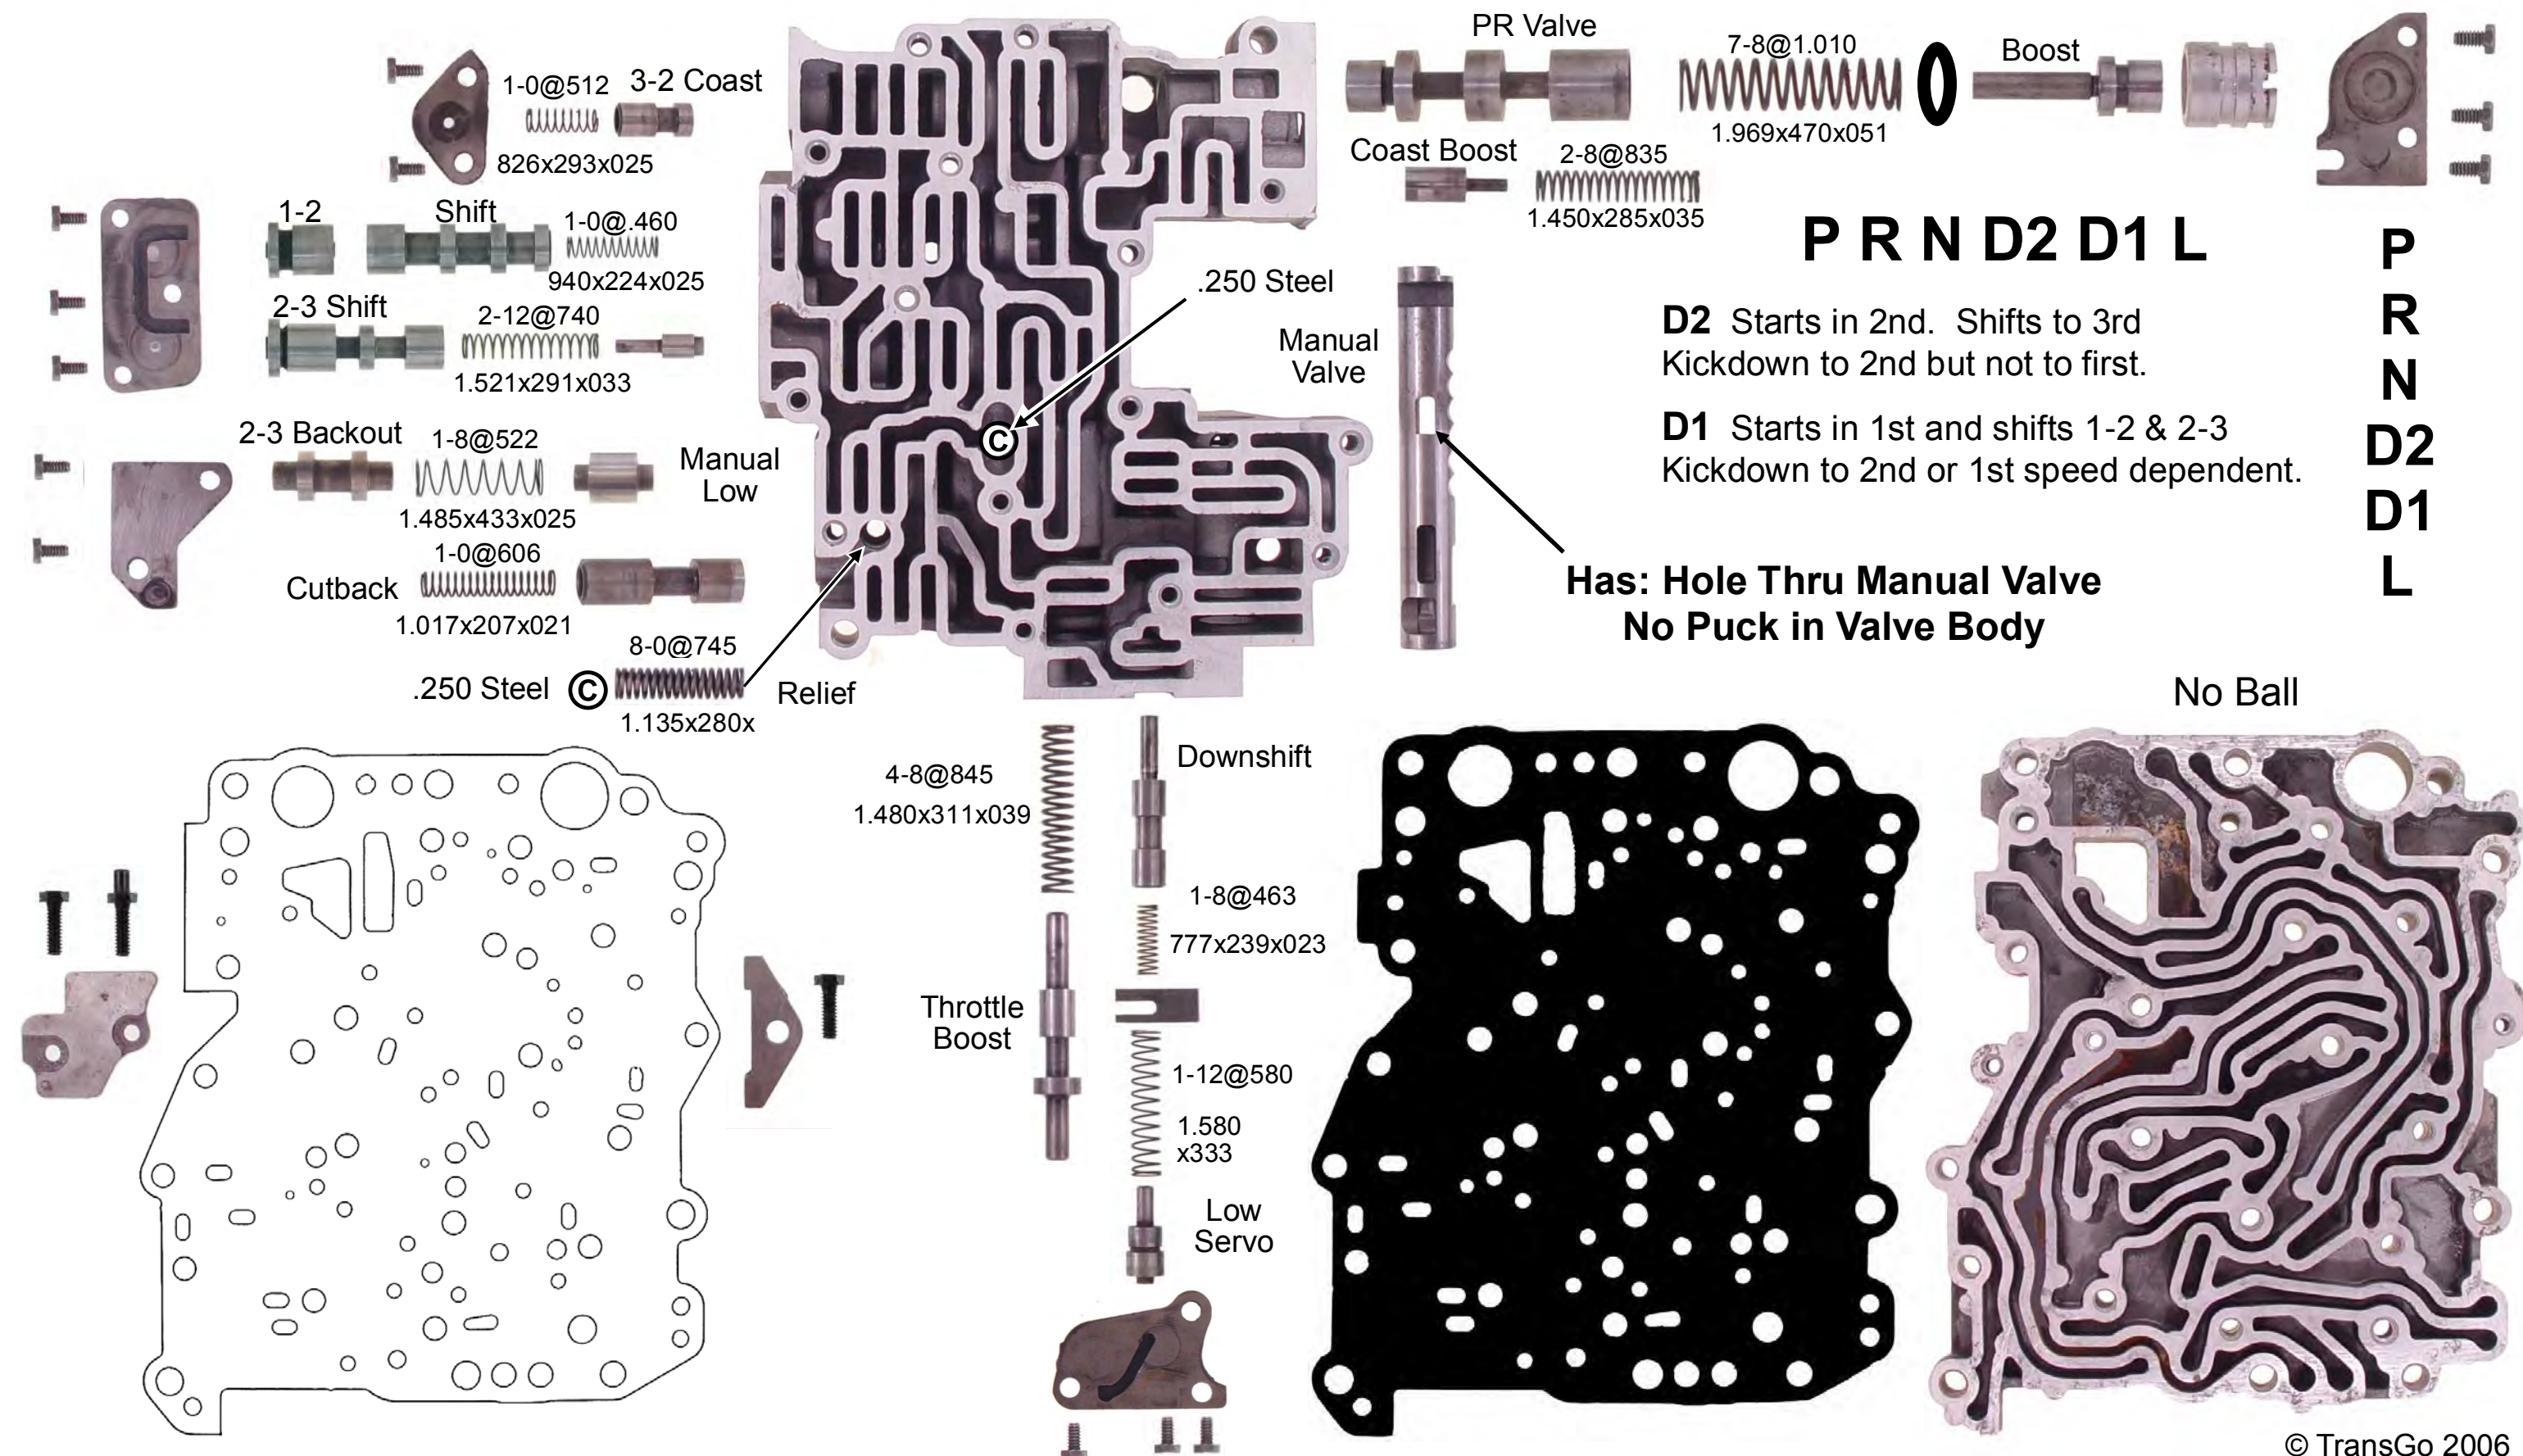

C4 64-66 Valve Body
 Use "SK 4L" Shift Kit®
 Use "45-1" HD Kit

C5 Casting Number
 On Valve Body/

LISTEN UP: Install all the end plate bolts
loosely. **LAST THING:** Tighten plate bolts.

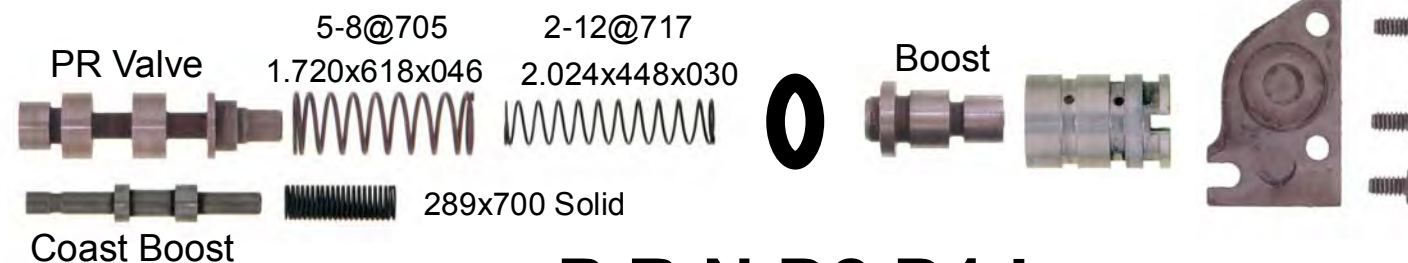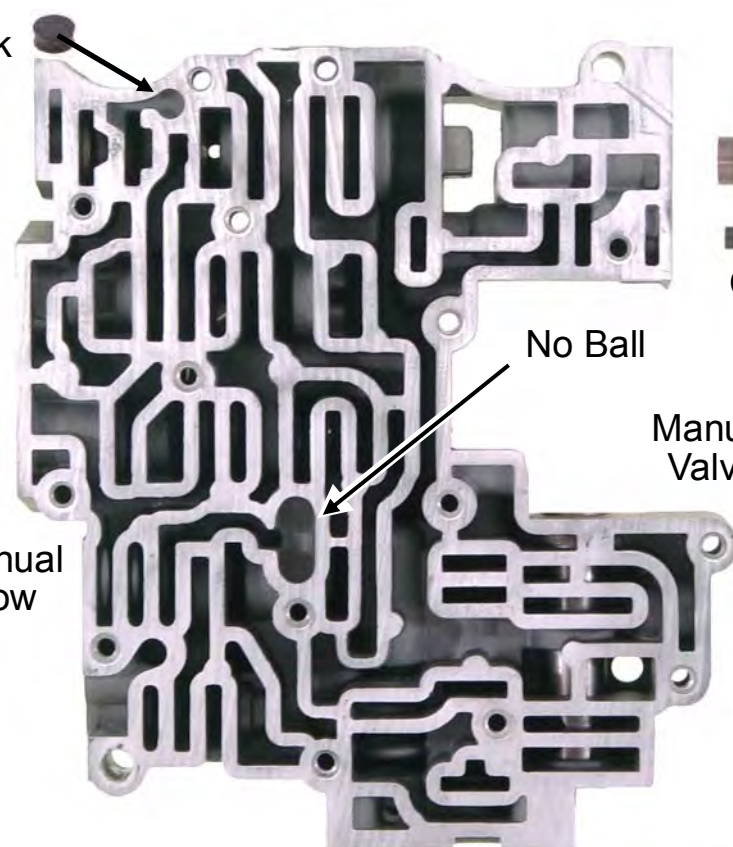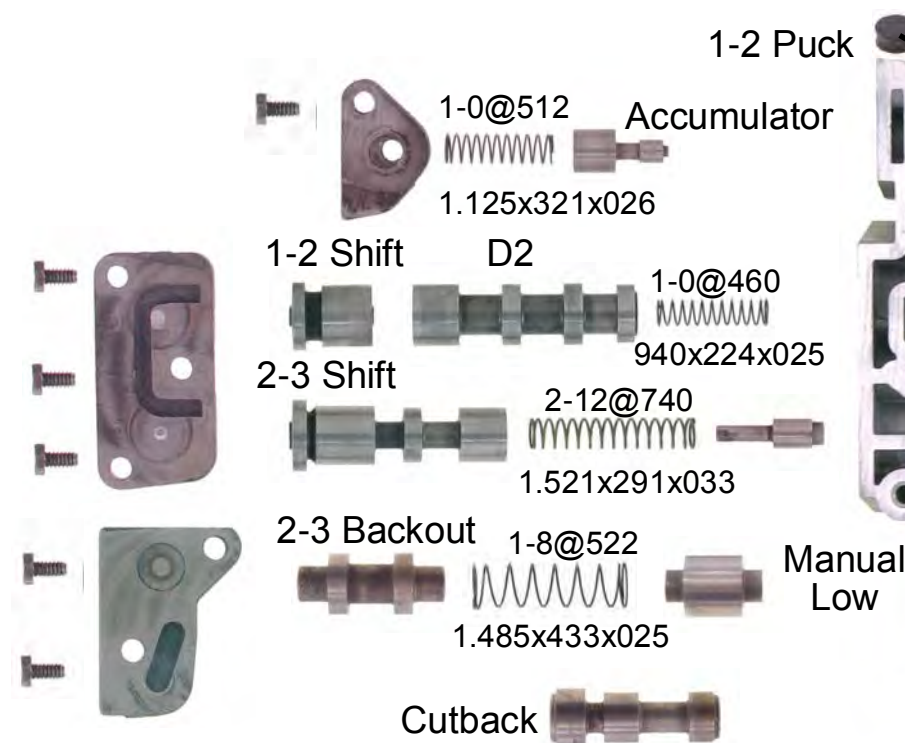




P R N D2 D1 L

**P
R
N
D2
D1
L**

D2 Starts in 2nd. Shifts to 3rd
 Kickdown to 2nd but not to first.
D1 Starts in 1st and shifts 1-2 & 2-3
 Kickdown to 2nd or 1st speed dependent.
L Starts off and stays in Low [1st]

**Has: Hole Thru Manual Valve
 No Check Balls in Valve Body**


No Ball

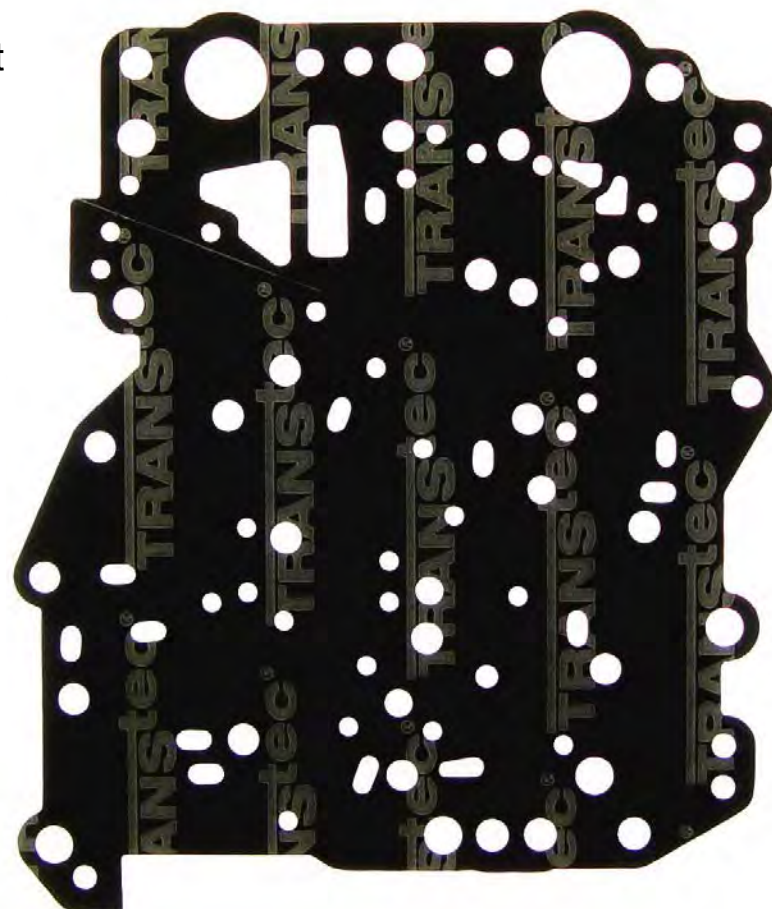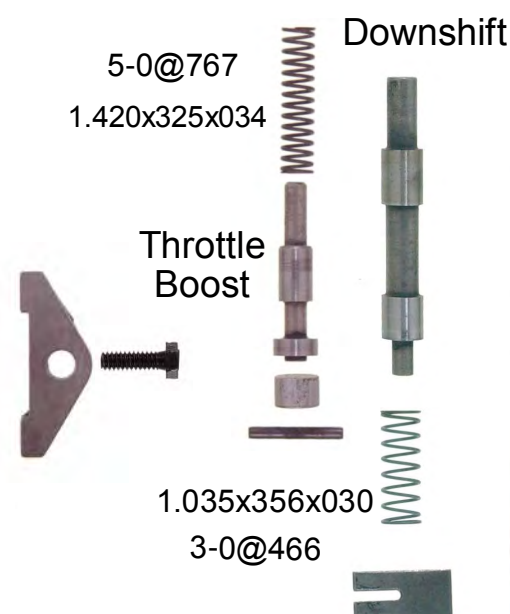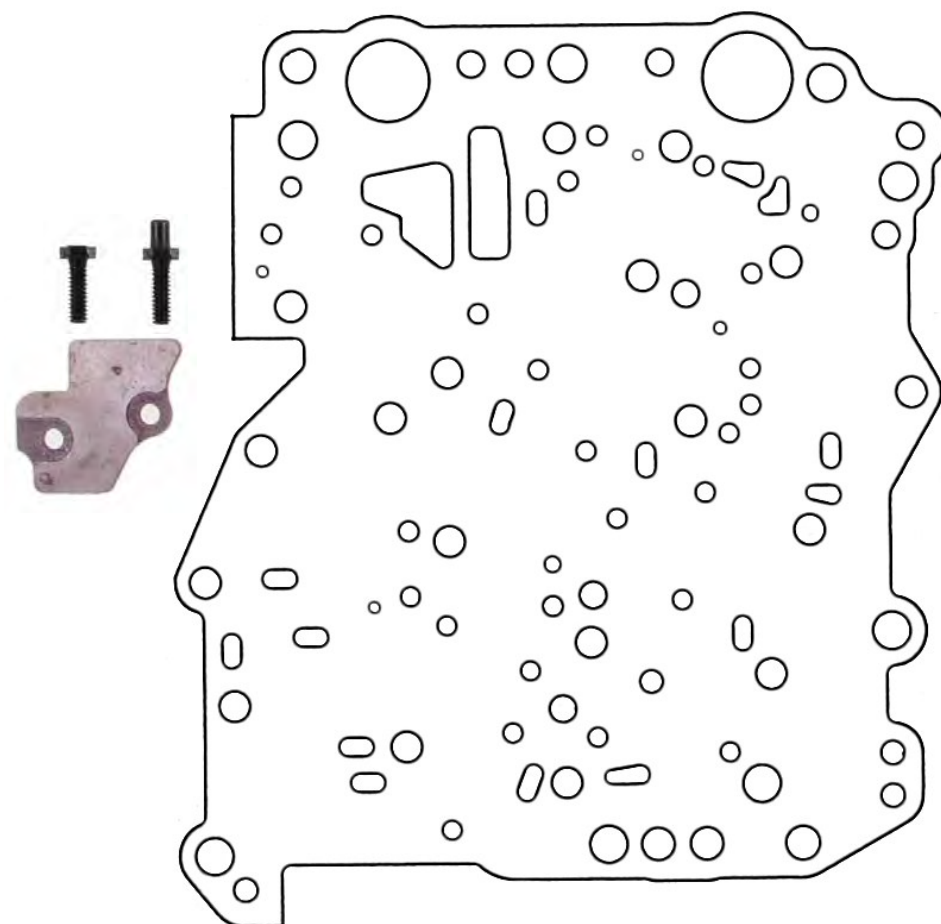

C4 67- 69 Valve Body
 Use "SK 4S" Shift Kit®
 Use "47-1", "47-2" or "47-3" HD kit

C7 Casting Number
 On Valve Body/Channel

LISTEN UP: Install all the end plate bolts
loosely. **LAST THING:** Tighten plate bolts.

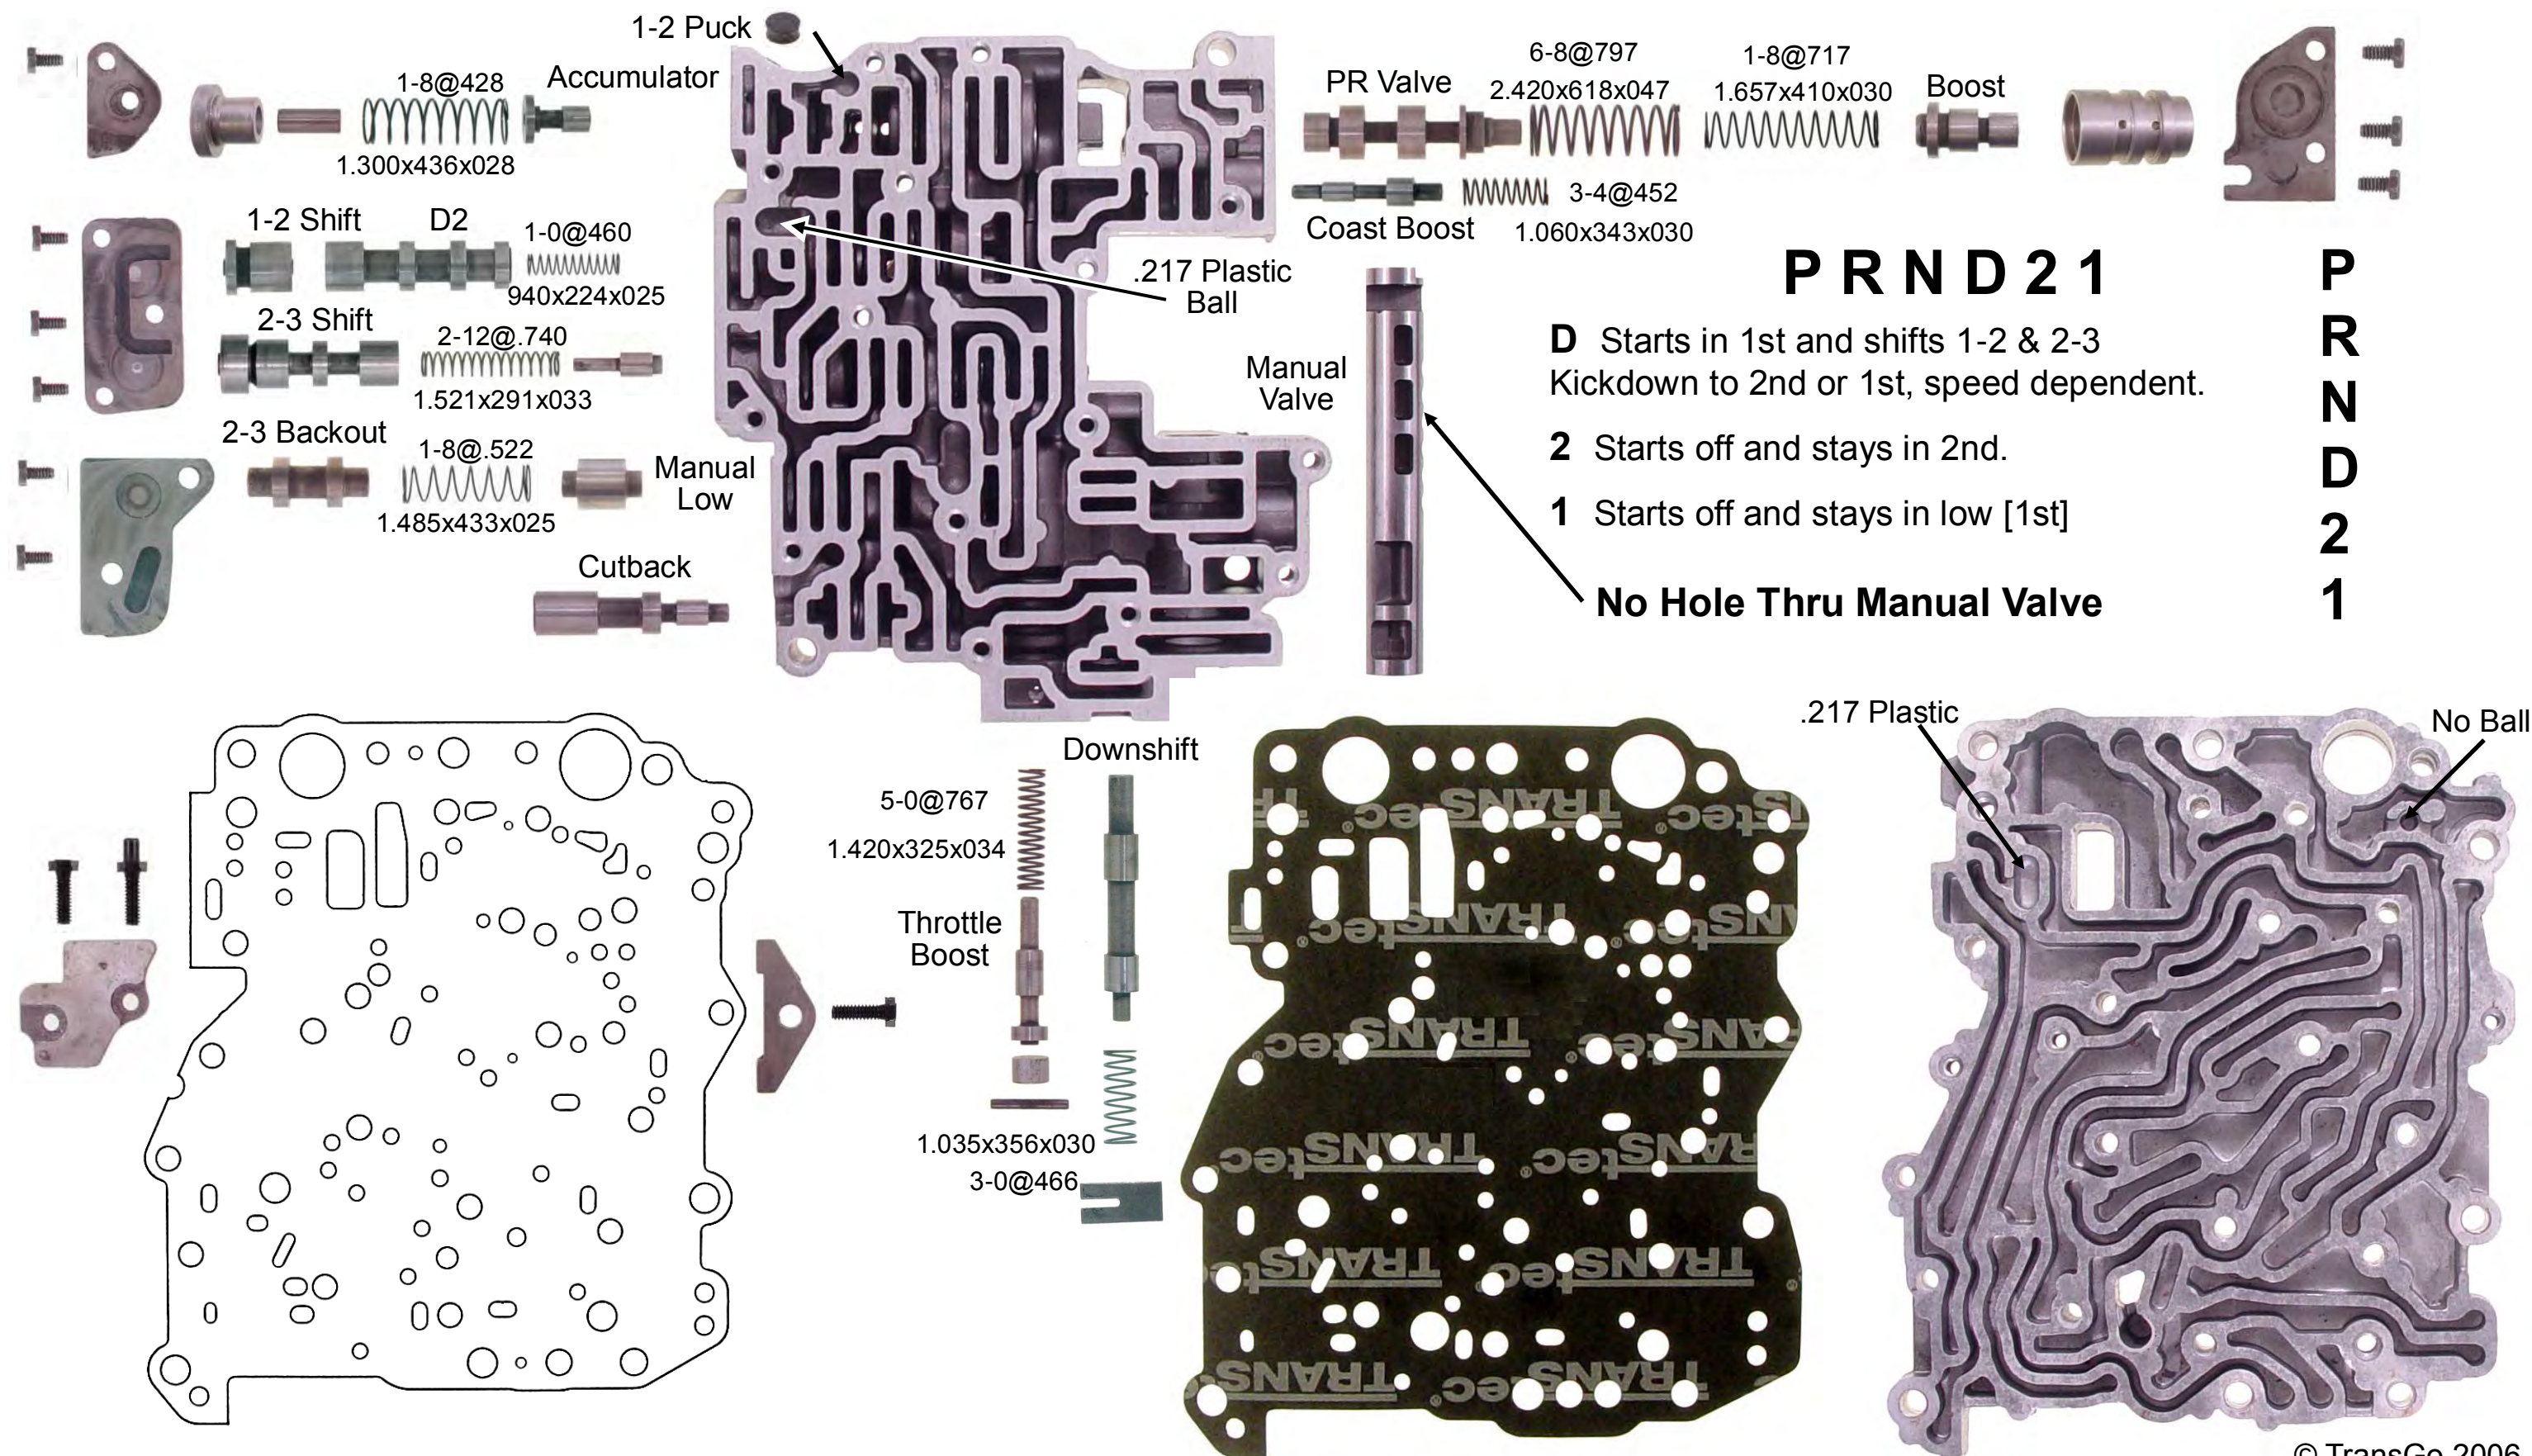

C4 70-Up Valve Body
Screw in Modulator
Use "SK 4-71" Shift Kit®
Use "40-2" or "40-3" HD Kit
Push in Modulator 71-Up
Use "SK C5" No HD Kit

D0 to D7 Casting Number
On Valve Body/Channel

LISTEN UP: Install all the end plate bolts
loosely. **LAST THING:** Tighten plate bolts.

1-2 Accumulator

1-2 Shift

2-3 Shift

12OZ@540

2-3 Backout

Cutback

Spring= Softer

D2

2-12@.740

1-12@625

1-0@460

940x224x025

1.521x291x033

1.137x331x032

1.445x335x026

1-2 Puck

.217 Plastic Ball

PR Valve

Coast Boost

Manual Valve

1.727x659x049

1.360x410x030

6-0@740

1-0@855

3-14@504

1.030x339x032

Boost

P R N D 2 1

D Starts in 1st and shifts 1-2 & 2-3.
Kickdown to 2nd or 1st, speed dependent.

2 Starts off and stays in 2nd.

1 Starts off and stays in Low [1st]

P R N D 2 1

Spindle Type Manual Valve

LISTEN UP: If this screw hits the case, remove it.

Downshift

Throttle Boost

Low Servo

5-0@767

1.420x325x034

3-0@490

810x279x030

1-8@535

1.149x380x027

.217 Plastic Ball

No Ball

6-0@757=160

1.19x29x036

Filter Holds spring.

C5 Valve Body Use "SK C5"
Shift Kit® No HD Kit for C5

D8 to E2 Casting Number
On Valve Body/Channel

• **LISTEN UP:** Install all the end plate bolts
loosely. **LAST THING:** Tighten plate bolts.

